



# INSTRUCTION MANUAL



**ELECTRIC IRON**  
Model Name: Goliath  
Model No.: GO1200WG

**USHA care**

Toll free  
**1800-1033-111**

[usha\\_care@usha.com](mailto:usha_care@usha.com)

## USHA INTERNATIONAL LTD.

Plot No.15, Institutional Area, Sector 32, Gurugram - 122 001 (Haryana) Tel : +91-124-4583100, Fax : +91-124-4583200

E-mail : [corporate@usha.com](mailto:corporate@usha.com) Website : [www.usha.com](http://www.usha.com)

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi (India) Tel : +91 11 23318114 Fax : +91 11 23318118

ISO 9001:2015  
Certified Company

Fans • Sewing Machines • Home Appliances • Engines & Pumpsets • Electrical Motors & Pumps • Water Coolers & Dispensers  
• Inverters • Cook Tops, Hobs & Hoods • Auto Components

**USHA** ® Registered Trademark and Copyright of USHA INTERNATIONAL LTD. **SERIKAM** ® Registered Trademark of USHA INTERNATIONAL LTD.



Dear Customer,

Congratulations!

You are now the proud owner of Usha Electric Iron.

Innovatively designed, using only the highest quality material and components, your Usha Electric Iron is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it cautiously after reading for future reference.

Best Wishes

## IMPORTANT PRECAUTIONS

- Please read operating instructions before using the appliance
- Never leave the iron 'ON' when not under observation. Unplug the iron, even when momentarily absent from the room
- Children should never be allowed to operate the iron. Keep away from the reach of children
- The iron gets very hot in use. Burns can Occur from touching the hot parts of the iron, therefore touch the handle and knob only
- Take care that the main cord does not touch the sole plate when it is hot
- Always unplug the iron from the mains supply socket
  - When it is not in use
  - In the event of the malfunction during use
  - Before cleaning the iron
- Never use the iron if it is damaged in any way
- Never unplug the iron from the mains supply socket by pulling the mains cord. Take care that the main cord does not trail over the front of the work surface
- In case the iron fails to operate or is damaged, Please contact authorised service centre for all the repairs
- For Your Safety Please ensure the power supply is with ELCB

Note: Some parts of the iron have been slightly greased and as a result, the iron might slightly smoke when used for the first time. After a short while however this ceases.

## IDENTIFICATION OF PARTS

- A. Thermostat Temperature Control Knob
- B. Sole plate
- C. Body
- D. Cotton braided power cord
- E. Indicator Light



## TECHNICAL INFORMATION

WATTAGE	1200W
VOLTAGE	240 V AC, 50 Hz
SOLEPLATE	Aluminium Alloy Soleplate Weilburger Gold non stick double layer coating

## FEATURES

- 1200 Watt element for powerful performance with less heating time.
- Ergonomically designed Cool touch shockproof plastic body to ensure protection from electric shocks.
- Weilburger non-stick coated soleplate with tubular elements for effortless ironing with best result.
- Weilburger Gold coated soleplate with easy grip fabric selector knob for a comfortable ironing experience.
- Centrally placed 360° swivel cord for both left and right hand operation.
- Snap action thermostat for accurate temperature control.
- Indication for thermostat function indication, which enables easy identification of whether the soleplate is heating or not.
- Button groove in soleplate for reaching into the tricky area under buttons


## OPERATING INSTRUCTIONS

1. Make sure that the applied voltage is same as the rating voltage and the socket has effective earth connection
2. The iron is for household use only
3. Do not touch the hot metal part, avoid scalding
4. Always check first whether ironing instructions are attached to the articles to be ironed (They can be found on the label)
  - If ironing instructions are missing but you do know the kind of fabric, refer the fabric temperature table in the instruction manual
  - Textile to which some kind of finish has been applied (gloss, wrinkle, relief etc.) can be ironed at some what lower temperature
  - If the fabric consists of various kinds of fibres you must always select the lowest ironing temperature of the composition (e.g. an article consisting of 60% polyester and 40% cotton, should be ironed at the temperature indicated for polyester)
  - Velvet and other textiles which rapidly acquire shiny spot should be ironed in one direction only, applying light pressure
  - Sort your clothes taking into account the nature of fabric and start ironing clothes that are more sensitive to heat (i.e. requires a cooler temperature setting)
  - Always keep the iron moving
5. Before ironing sensitive fabrics check the material by ironing a small hidden part of the article to see whether it is sensitive to heat or not
6. It is best to iron the garments when they are still a little damp, extremely dry garments are difficult to iron
7. Always position the iron on the heel rest when not in use/ironing

## HOW TO USE IRON

1. Position the iron on the heel rest and connect it to mains supply socket
2. Turn the temperature selector to the desired setting (relating to the type of fabric)
3. The indicator lamp switches 'ON' with the appliance and indicates that the sole plate is heating up. Once the desired temperature is achieved the signal light will go 'OFF'. So start ironing your fabric. The indicator light will switch ON/OFF from time to time in order to regulate the temperature of the sole plate
4. If you set the temperature control to the lower setting after ironing at the higher temperature, do not recommence ironing before the ON light glows again
5. When the ironing is finished unplug the iron from the mains supply socket

## FABRIC TEMPERATURE TABLE

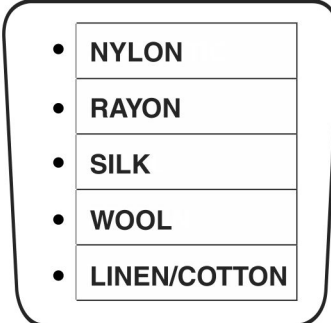

•	<b>NYLON</b>
•	<b>RAYON</b>
•	<b>SILK</b>
•	<b>WOOL</b>
•	<b>LINEN/COTTON</b>

## HINT FOR CLEANING/CARE OF THE IRON

1. Before cleaning the iron always make sure that the plug has been removed from the mains supply socket
2. Allow the iron to cool down before cleaning
3. Never immerse the iron in water
4. Wipe the iron with a soft & dry cloth
5. To keep the sole plate of your iron clean at all times:
  - Do not place the sole plate on a rough or abrasive surface
  - Do not use the iron on metallic fittings, zips etc. to avoid scratches
  - After each use clean with a damp cloth when the iron is still warm. For stubborn marks, clean with vinegar when the iron is cold and then clean with damp cloth
  - Never select higher temperature for the article to be ironed otherwise you run the risk of scorching the fabric and damaging the sole plate
  - Apply a small amount of paraffin on the soleplate while the iron is still slightly hot, remove the residues with the soft cloth

## STORING

- Before storing let the iron cool down sufficiently (standing on the back rest)
- Clean the iron with a damp cloth
- You can wind the mains cord
- Store the iron standing on its back rest to prevent damages to the sole plate

In case of any defect do not tamper with the appliance yourself, contact Usha Care at Toll Free No. 1800 1 033 111.

**WARRANTY CARD**

This appliance is warranted for 2 year against all manufacturing defects from the date of sale. In the event of any complaint, please contact Usha Care at Toll Free No.1800 1033111.

The warranty is valid only when:

- 1) The appliance has been installed, used and maintained in accordance with the instruction manual
- 2) The warranty card and cash memo duly signed by the authorised dealer are presented with the complaint
- 3) The appliance has not been opened or tampered with, by any unauthorised person

This warranty does not apply for:

- 1) Damages due to chipping, peeling, plating and denting
- 2) Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord
- 3) Normal wear and tear of parts
- 4) Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damages:

- 1) The Company will not be liable for any loss or damage arising/resulting from indirect or consequential loss or damages
- 2) The Company aggregate liability in respect of all claims under the Warranty shall not exceed the original purchase price of the Product or, at Company's option, replacement of the Product with a like or similar Product
- 3) The Company excludes all other warranties, conditions, terms, representations and undertakings whether express or implied

Jurisdiction:

- 1) The courts at Delhi shall have exclusive jurisdiction to resolve any disputes between the parties arising under Terms and Conditions of Warranty.

S. NO: \_\_\_\_\_

CASH MEMO \_\_\_\_\_ DATE: \_\_\_\_\_

DEALER'S NAME AND ADDRESS: \_\_\_\_\_

OWNER'S NAME & ADDRESS: \_\_\_\_\_